


NOTE: ENSURE THAT THE POWER TO THE FIXTURE'S CIRCUIT IS TURNED OFF. / VEUILLEZ VOUS ASSURER QUE L'ALIMENTATION DU LUMINAIRE EST COUPÉE AU CIRCUIT.

WIRING DIAGRAM - POWER OVER ETHERNET (POE) SCHÉMA DES FILS - ALIMENTATION SUR INTERNET (POE)

NOTE: VIEW NOT TO SCALE
NOTE: VUE NON À L'ÉCHELLE

by / par **AXIS**

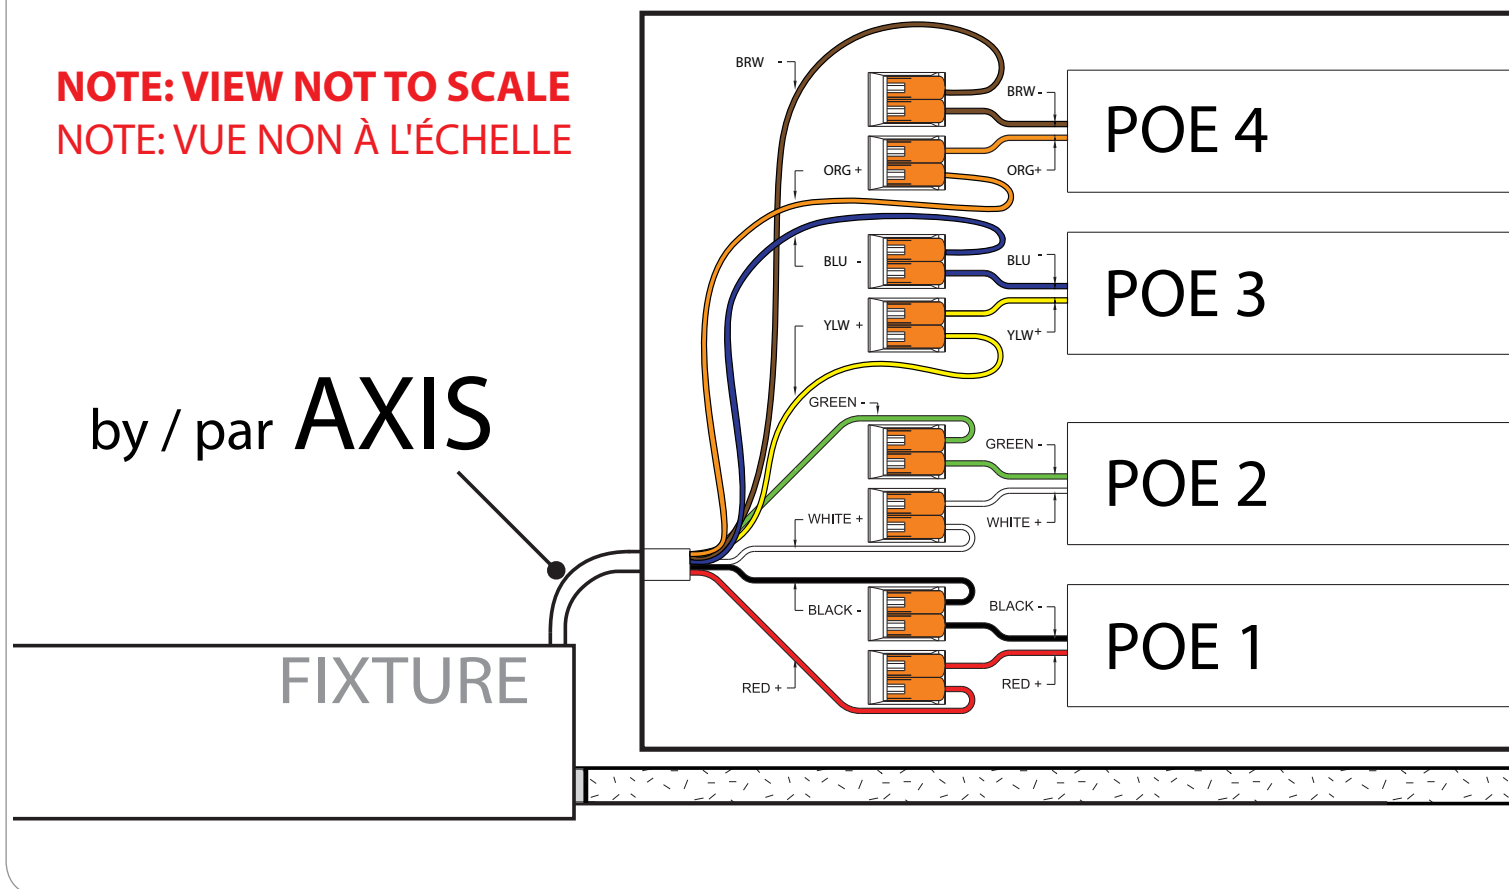

La conception et le développement font partie d'un processus d'évolution continu chez Éclairage Axis. Nous nous réservons le droit de changer les spécifications. Pour obtenir l'information la plus récente sur le produit, veuillez contacter Axis.

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information. © 2016 Axis Lighting Inc. 1.800.263.2947 [T]514.948.6272

NOM DE FILIÈRE / FILE NAME: AURA.T-BAR.INST - POE

RÉVISION 001 / REVISION 001


29 / 03 / 2019




AVERTISSEMENT : LOCALISER TOUS LES CIRCUITS ET CABLES. **RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

WARNING : LOCATE ALL POWER CONDUITS AND CABLES. **RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

NOTE: ENSURE THAT THE POWER TO THE FIXTURE'S CIRCUIT IS TURNED OFF. / VEUILLEZ VOUS ASSURER QUE L'ALIMENTATION DU LUMINAIRE EST COUPÉE AU CIRCUIT.



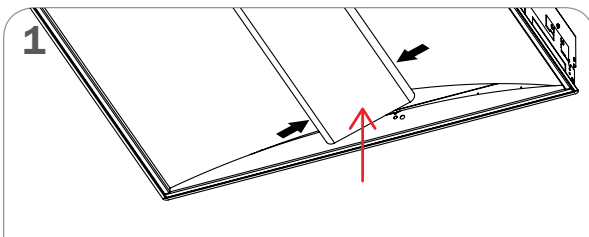


DETAIL SECTION VIEW / DÉTAIL DE LA VUE TRANSVERSALE

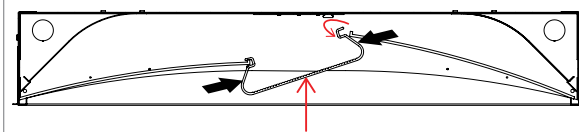

SQUEEZE LIGHTLY ON CENTER LENS SIDES WHILE PUSHING UP SLIGHTLY AND ROTATING LENS UNTIL ONE SIDE OF LENS IS FREE, THEN LOWER. PULL ON SIDE LENS TO REMOVE OPTICAL ENTIRELY FROM FIXTURE.

COMPRIMER LÉGÈREMENT LES CÔTÉS DE LA LENTILLE AU CENTRE TOUT EN POUSSANT DOUCEMENT ET EN FAISANT PIVOTER LA LENTILLE JUSQU'À CE QU'UN CÔTÉ DE LA LENTILLE SE LIBÈRE, PUIS ABAISSER. TIRER SUR LE CÔTÉ DE LA LENTILLE POUR RETIRER COMPLÈTEMENT L'OPTIQUE DU LUMINAIRE.

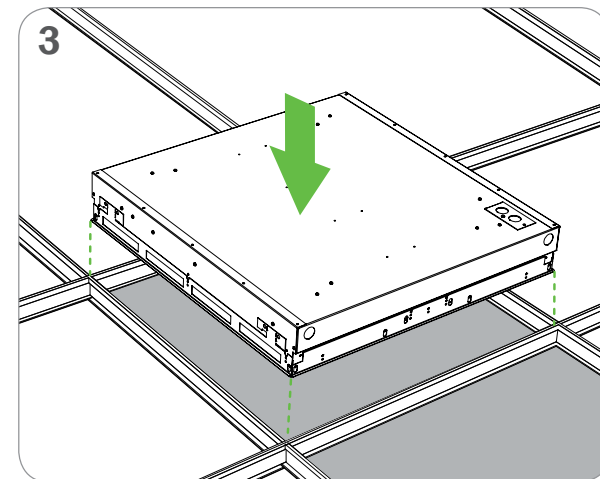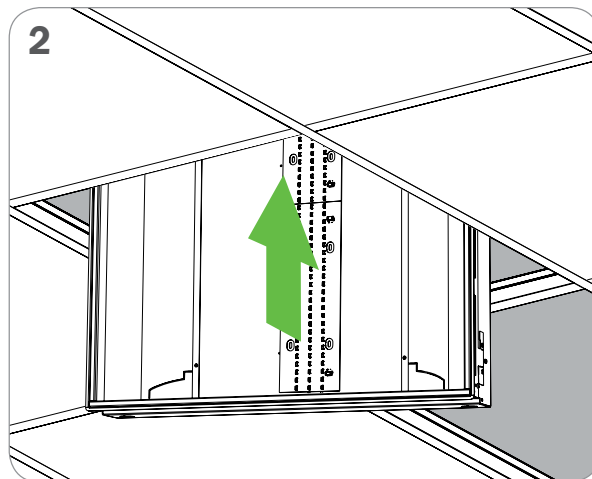
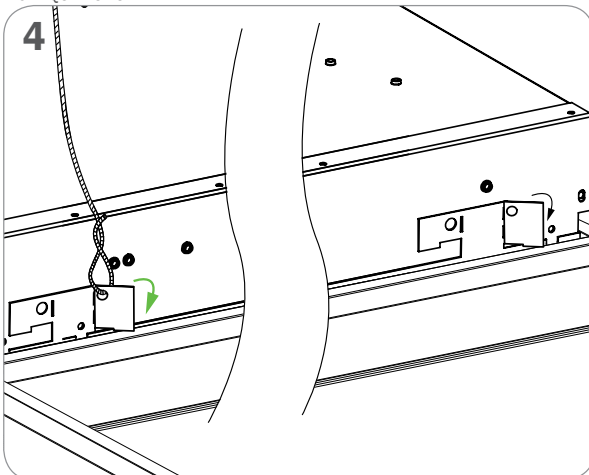


5 WIRING DIAGRAM / SCHÉMA DES FILS REFERENCE ON PAGE 1 / RÉFÉRENCE SUR PAGE 1

NOTE: VIEW NOT TO SCALE
NOTE: VUE NON À L'ÉCHELLE

by / par **AXIS**

FIXTURE

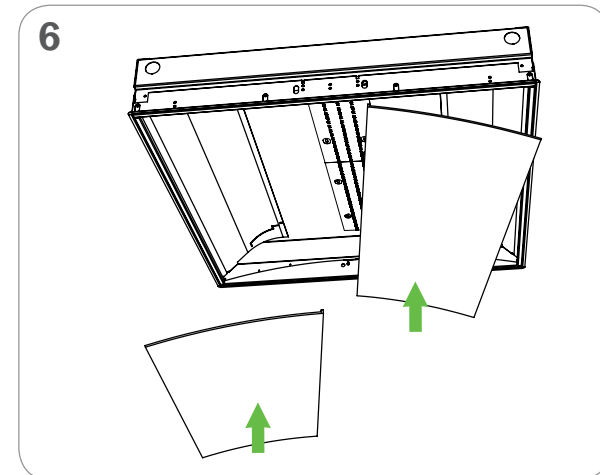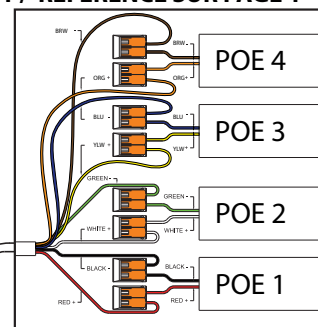

MAKE SURE NEW LENSES ARE SEATED ON THE ARCHED GROOVE INSIDE THE HOUSING.
VOUS ASSUREZ QUE LES NOUVELLES LENTILLES SOIENT BIEN APPUYÉES SUR LA RAINURE CAMBRÉE À L'INTÉRIEUR DU BOÎTIER.

La conception et le développement font partie d'un processus d'évolution continu chez Éclairage Axis. Nous nous réservons le droit de changer les spécifications. Pour obtenir l'information la plus récente sur le produit, veuillez contacter Axis.

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information. © 2016 Axis Lighting Inc. 1.800.263.2947 [T]514.948.6272

NOM DE FILIÈRE / FILE NAME: AURA-T-BAR-INST - POE

RÉVISION 001 / REVISION 001


29 / 03 / 2019



AVERTISSEMENT : LOCALISER TOUS LES CIRCUITS ET CABLES. **RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**



WARNING : LOCATE ALL POWER CONDUITS AND CABLES. **RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

NOTE: ENSURE THAT THE POWER TO THE FIXTURE'S CIRCUIT IS TURNED OFF. / VEUILLEZ VOUS ASSURER QUE L'ALIMENTATION DU LUMINAIRE EST COUPÉE AU CIRCUIT.

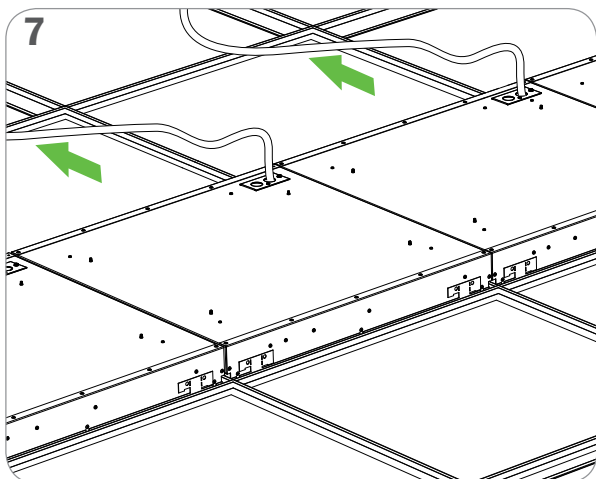


CONTINUOUS ROW : FOLLOW STEPS 1 TO 5 TO INSTALL NEXT FIXTURE IN CEILING, THEN :

ENFILEADE CONTINUE: RÉPÉTER LES ÉTAPES 1 À 5 POUR LES AUTRES LUMINAIRES DE L'ENFILEADE

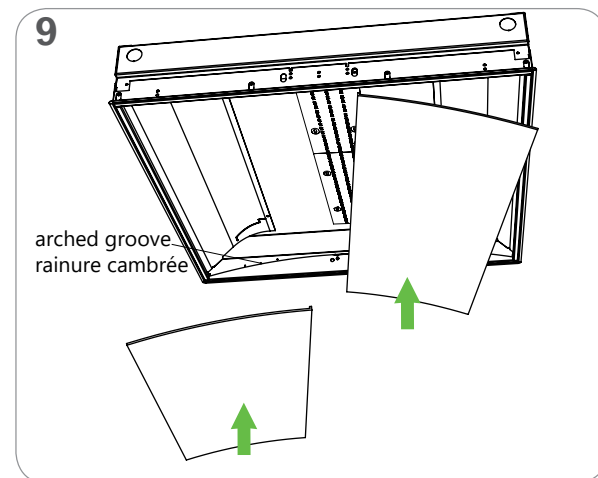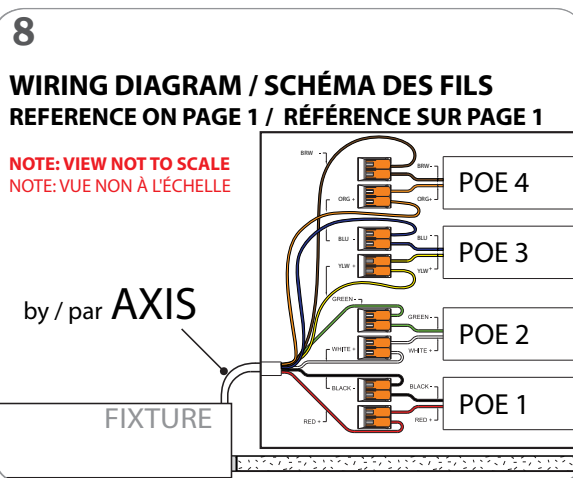

MAKE SURE NEW LENSES ARE SEATED ON THE ARCHED GROOVE INSIDE THE HOUSING.
VOUS ASSUREZ QUE LES NOUVELLES LENTILLES SOIENT BIEN APPUYÉES SUR LA RAINURE CAMBRÉE À L'INTÉRIEUR DU BOÎTIER.

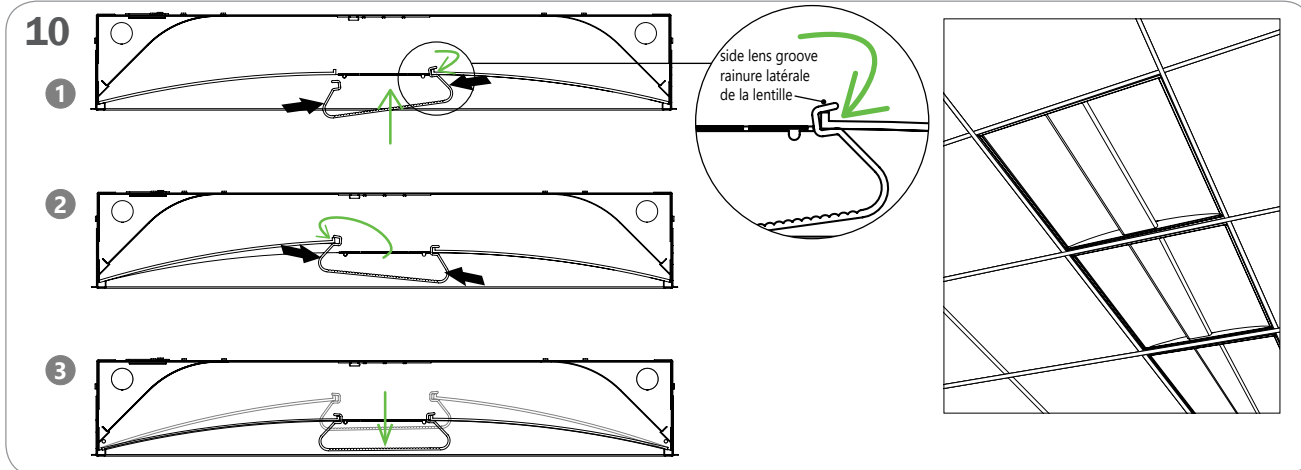

- 1) HOOK CENTER LENS SIDE ON RIGHT LENS GROOVE.
- 2) PUSH AND ROTATE UPWARD UNTIL SECOND SIDE OF CENTER LENS FALLS ON THE LEFT LENS GROOVE.
- 3) TURN CENTER LENS LEVEL AND PULL DOWN.
- 1) ACCROCHER LE CÔTÉ DE LA LENTILLE CENTRALE SUR LA RAINURE DROITE DE LENTILLE
- 2) POUSSER ET FAIRE PIVOTER VERS LE HAUT JUSQU'À CE QUE LE DEUXIÈME CÔTÉ DE LA LENTILLE CENTRALE S'ENCLENCHE DANS LA RAINURE GAUCHE DE LENTILLE.
- 3) TOURNER LE NIVEAU DE LA LENTILLE CENTRALE ET TIRER VERS LE BAS.

La conception et le développement font partie d'un processus d'évolution continu chez Éclairage Axis. Nous nous réservons le droit de changer les spécifications. Pour obtenir l'information la plus récente sur le produit, veuillez contacter Axis.

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information. © 2016 Axis Lighting Inc. 1.800.263.2947 [T]514.948.6272



AVERTISSEMENT : LOCALISER TOUS LES CIRCUITS ET CABLES. **RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

WARNING : LOCATE ALL POWER CONDUITS AND CABLES. **RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**