

## WALL - DRIVER REPLACEMENT INSTRUCTIONS MURAL - DIRECTIVES DE REMPLACEMENT DU PILOTE

**NOTE:** Ensure that the power to the fixture's circuit is turned off.

**NOTE:** Vous assurez que l'alimentation du circuit du luminaire est coupée.

