

## RECESSED DRYWALL MOUNT INSTALLATION INSTRUCTIONS FOR SPACKLE FLANGE (DS) DIRECTIVES D'INSTALLATION POUR MONTAGE ENCASTRÉ DANS LE PLACOPLÂTRE POUR LA BORDURE PLÂTRÉE (DS)

**NOTE:** ENSURE THAT THE POWER TO THE FIXTURE'S CIRCUIT IS TURNED OFF. WHEN INSTALLING FIXTURES, DO NOT APPLY PRESSURE TO THE SIDES AS THIS MAY ALTER THE APERTURE. ENSURE THAT THE FIXTURE IS STRAIGHT AND TRUE WHEN INSTALLED. IF THERE ARE CORNERS, ENSURE THAT CORNERS ARE SQUARE AND FIT TIGHTLY TOGETHER.

**NOTE:** VOUS ASSUREZ QUE L'ALIMENTATION DU CIRCUIT DU LUMINAIRE EST COUPÉE LORS DE L'INSTALLATION, NE PAS APPUYER SUR LES CÔTÉS POUR NE PAS ENDOMMAGER L'OUVERTURE. VOUS ASSUREZ QUE LE LUMINAIRE EST BIEN DROIT LORS DE L'INSTALLATION. SI DES COINS SONT PRÉSENTS, VOUS ASSUREZ QUE LES COINS SONT BIEN CARRÉS ET BIEN REFERMÉS.

Warning: Every Axis Lighting fixture undergoes quality testing. Should an LED board not work properly, please turn fixture off and contact Axis technical support at 1-800-263-2947 for immediate assistance.


Avertissement: Chaque luminaire d'Éclairage Axis sont soumis à des tests de qualité. Si une carte DEL ne fonctionne pas normalement, veuillez couper l'alimentation et contacter le support technique d'Axis au 1-800-263-2497


1 WARNING: BEFORE CUTTING INTO DRYWALL, LOCATE ALL POWER CONDUITS AND CABLES.


AVERTISSEMENT: AVANT DE COUPER LE PLACOPLÂTRE, REPÉRER TOUS LES CONDUITS ET CÂBLES D'ALIMENTATION.


MAKE AN OPENING IN DRYWALL ACCORDING TO THE DIMENSIONS


DÉCOUPER UNE OUVERTURE DANS LE PLACOPLÂTRE SELON LES DIMENSIONS INDIOUÉES DANS LES DESSINS TECHNIQUES

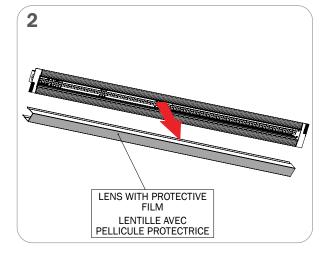

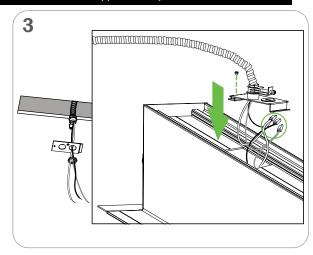

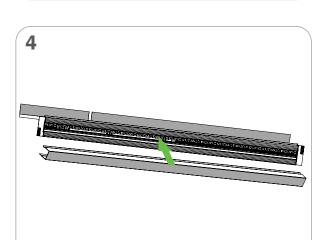

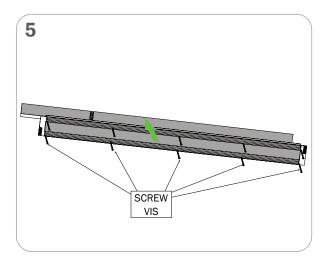

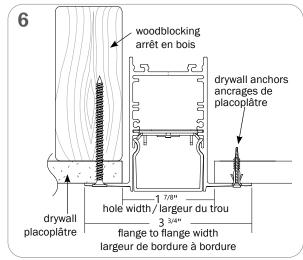


WOOD BLOCKING OR DRYWALL ANCHORS MUST BE USED TO REINFORCE THE SCREWS TO THE DRYWALL

UN ARRÊT EN BOIS OU DES ANCRAGES DE PLACOPLÂTRE DOIVENT ÊTRE UTILISÉS POUR RENFORCER LES VIS DANS LE PLACOPLÂTRE

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information. © 2018 Axis Lighting Inc. 1.800.263.2947 [T]514.948.6272



W A R N I N G: LOCATE ALL POWER CONDUITS AND CABLES. RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.









ON THE SHOP DRAWINGS


## RECESSED DRYWALL MOUNT INSTALLATION INSTRUCTIONS FOR SPACKLE FLANGE (DS) DIRECTIVES D'INSTALLATION POUR MONTAGE ENCASTRÉ DANS LE PLACOPLÂTRE POUR LA BORDURE PLÂTRÉE (DS)

NOTE: ENSURE THAT THE POWER TO THE FIXTURE'S CIRCUIT IS TURNED OFF. WHEN INSTALLING FIXTURES. DO NOT APPLY PRESSURE TO THE SIDES AS THIS MAY ALTER THE APERTURE. ENSURE THAT THE FIXTURE IS STRAIGHT AND TRUE WHEN INSTALLED. IF THERE ARE CORNERS, ENSURE THAT CORNERS ARE SQUARE AND FIT TIGHTLY TOGETHER.


NOTE: VOUS ASSUREZ QUE L'ALIMENTATION DU CIRCUIT DU LUMINAIRE EST COUPÉE LORS DE L'INSTALLATION, NE PAS APPUYER SUR LES CÔTÉS POUR NE PAS ENDOMMAGER L'OUVERTURE. VOUS ASSUREZ QUE LE LUMINAIRE EST BIEN DROIT LORS DE L'INSTALLATION. SI DES COINS SONT PRÉSENTS, VOUS ASSUREZ QUE LES COINS SONT BIEN CARRÉS ET BIEN REFERMÉS.

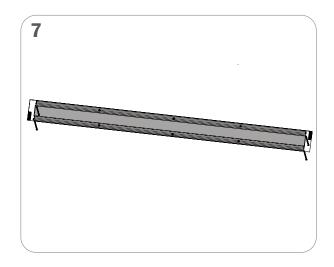

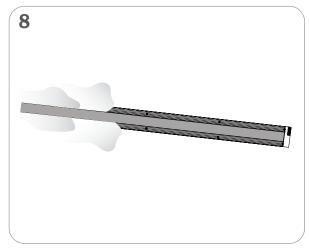

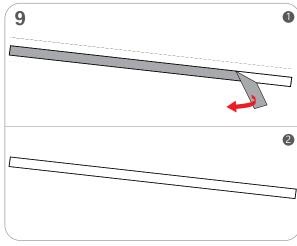



ENSURE FIT OF THE LENS BY REMOVING AND REINSTALLING BEFORE PLASTER. IF THE OPTICS APPEARS BOWED OR TOO LOOSE, REMOVE SCREWS ON ONE SIDE OF THE SPACKLE FLANGE, ADJUST THE FIXTURE SO THAT IT FITS FLAT AND SNUG, AND REINSTALL SCREWS. VOUS ASSUREZ OUE LA LENTILLE S'INSÈRE BIEN EN LA RETIRANT ET LA RÉINSTALLANT AVANT DE PLÂTRER. SI L'OPTIQUE SEMBLE FLÉCHIE OU DESSERRÉE, RETIRER LES VIS SUR UN CÔTÉ DE LA BORDURE DE PLÂTRAGE ET AJUSTER LE LUMINAIRE AFIN OU'IL AFFLEURE ET SOIT BIEN SERRÉ, RÉINSTALLER LES VIS

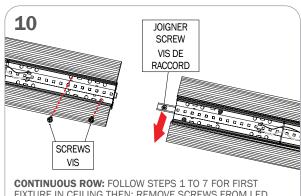

FIXTURE IN CEILING, THEN: REMOVE SCREWS FROM LED BOARDS ON EXTREMITIES AND JOIGNER BRACKET

**ENFILADE CONTINUE:** SUIVRE LES ÉTAPES 1 À 7 POUR LE PREMIER LUMINAIRE DANS LE PLAFOND PUIS RETIRER LES VIS DES CARTES DEL AUX EXTRÉMITÉS ET AU SUPPORT DE RACCORD

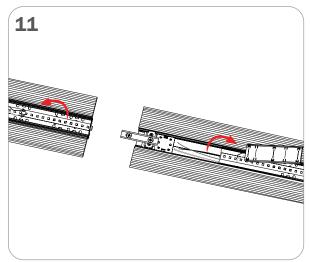

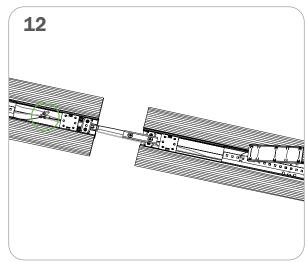

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information. © 2018 Axis Lighting Inc. 1.800.263.2947 [T]514.948.6272



W A R N I N G: LOCATE ALL POWER CONDUITS AND CABLES, RISK OF FIRE AND ELECTRICAL SHOCK, FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES, DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING

La conception et le développement font partie d'un processus d'évolution continu chez Éclairage Axis. Nous nous réservons le droit de changer les spécifications. Pour obtenir l'information la plus récente sur le produit, veuillez contacter Axis,










## RECESSED DRYWALL MOUNT INSTALLATION INSTRUCTIONS FOR SPACKLE FLANGE (DS) DIRECTIVES D'INSTALLATION POUR MONTAGE ENCASTRÉ DANS LE PLACOPLÂTRE POUR LA BORDURE PLÂTRÉE (DS)

NOTE: ENSURE THAT THE POWER TO THE FIXTURE'S CIRCUIT IS TURNED OFF. WHEN INSTALLING FIXTURES, DO NOT APPLY PRESSURE TO THE SIDES AS THIS MAY ALTER THE APERTURE. ENSURE THAT THE FIXTURE IS STRAIGHT AND TRUE WHEN INSTALLED. IF THERE ARE CORNERS, ENSURE THAT CORNERS ARE SQUARE AND FIT TIGHTLY TOGETHER.

NOTE: VOUS ASSUREZ QUE L'ALIMENTATION DU CIRCUIT DU LUMINAIRE EST COUPÉE LORS DE L'INSTALLATION, NE PAS APPUYER SUR LES CÔTÉS POUR NE PAS ENDOMMAGER L'OUVERTURE. VOUS ASSUREZ QUE LE LUMINAIRE EST BIEN DROIT LORS DE L'INSTALLATION. SI DES COINS SONT PRÉSENTS, VOUS ASSUREZ QUE LES COINS SONT BIEN CARRÉS ET BIEN REFERMÉS.

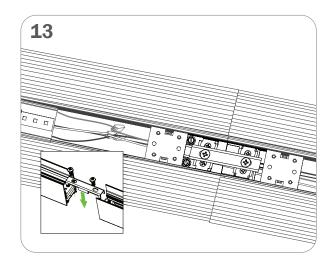

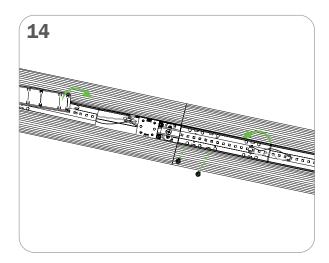


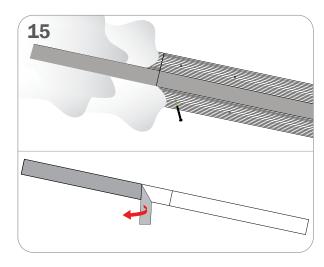

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information. © 2018 Axis Lighting Inc. 1.800.263.2947 [T]514.948.6272









W A R N I N G: LOCATE ALL POWER CONDUITS AND CABLES, RISK OF FIRE AND ELECTRICAL SHOCK, FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH

